

13-POINT HRV/ERV MAINTENANCE

13	HRV / ERV Maintenance
1	Check and clean controls
2	Check / clean condensate drain / pump
3	Check damper position (balance)
4	Check and clean filters
5	Check and wash core
6	Check defrost controls
7	Check intake/exhaust for debris
8	Lubricate moving parts
9	Check for signs of water leaks / drain
10	Wipe down unit
11	Run and test operation
12	Check for manufacturer's installation / operation manuals
13	Review and document results / recommendations with client



